



## Index

	Page		Page		Page
<b>A</b>		<b>B</b>		<b>C</b>	
Add-On Non-Genuine Parts and Accessories	9-7	Battery	8-29	Capacities	10-3
Air Bag Restraint System	2-14	Charging system warning light	5-28	Cassette Tape Player	5-71
Warning light	5-30	Jump-starting	6-4	Catalytic Converter	
Air Filter	8-25	Before Driving		(see Emission Control System)	
Aluminum Wheel Maintenance	7-8	After getting in	4-6	Center Console	5-38
Antenna	5-77	Before getting in	4-6	Chains	4-10
Antilock Brake System (ABS)	5-16	Body Lubrication	8-25	Changing a Flat Tire	6-15
Warning light	5-29	Brakes		Changing Coolant	8-16
Appearance Care	7-1	Antilock brake system (ABS)	5-16	Changing the Oil	8-14
Ashtray	5-37	Fluid level	8-18	Charging System Warning Light	5-28
Audio System		Foot brake	5-14	Checking	
Cassette tape player	5-71	Pad wear indicator	5-15	Automatic transmission fluid level	8-22
Compact disc player	5-53	Parking brake	5-15	Brake fluid level	8-18
Radio	5-53	System warning light	5-27	Clutch fluid level	8-19
Automatic Transmission		Break-In Period	4-6	Coolant level	8-15
Controls	5-8	Bright-Metal Maintenance	7-7	Engine oil level	8-13
Driving tips	5-10	Bulb Replacement		Power steering fluid level	8-21
Fluid level	8-22	Front, Interior	8-38	Washer fluid level	8-24
Overdrive	5-11	Headlight	8-35	Child Restraint	2-9
Shift-lock override	5-13	Rear	8-39	Child restraint precautions	2-9
Shift-lock system	5-12			Child-restraint system	2-11
Transmission ranges	5-9			Installing a child-restraint system	2-12
				Cigarette Lighter	5-36
				Cleaning	
				Dashboard	7-11

	Page		Page		Page
Lap/shoulder belt webbing .....	7-12	<b>D</b>		<b>E</b>	
Upholstery and interior trim .....	7-11			Emergency Starting	
Window interiors .....	7-12	Dashboard Illumination .....	5-26	Jump-starting .....	6-4
Climate Control System .....	5-40	Dashboard Overview .....	1-3	Push-starting .....	6-6
Clock .....	5-36	Dashboard Precautions .....	7-11	Emission Control System .....	4-3
Clutch Fluid Level .....	8-19	Day/Night Mirror .....	3-13	Engine Compartment Overview .....	8-11
Compact Disc Player .....	5-53	Defroster		Engine Coolant	
Convertible Top		Rear window .....	5-35	Adding coolant .....	8-15
Operation .....	3-16	Detachable Hardtop		Changing coolant .....	8-16
Overview .....	3-15	Operation .....	3-25	Inspecting coolant level .....	8-15
Convertible Top Maintenance .....	7-9	Overview .....	3-23	Overheating .....	6-2
Coolant, Engine		Detachable Hardtop Maintenance .....	7-10	Engine Coolant Temperature Gauge	
Adding .....	8-15	Door Locks		(see Water)	
Changing .....	8-16	Inside door lock .....	3-3	Engine Exhaust (Carbon Monoxide) ....	4-4
Inspecting .....	8-15	Outside door lock .....	3-2	Engine Oil	
Cruise Control .....	5-18	Doors .....	1-4	Changing engine oil and filter .....	8-14
Cup Holder .....	5-38	Driving		Inspecting engine oil level .....	8-13
Customer Assistance .....	9-2, 9-4	Hazardous driving .....	4-8	Recommended oil .....	8-12
Customer Information .....	9-1	In flooded areas .....	4-11	Engine Oil Pressure Gauge .....	5-26
		Rocking the vehicle .....	4-8	Engine Starting .....	5-4
		Winter driving .....	4-9	Exhaust (Carbon Monoxide) .....	4-4
				Exterior Care .....	7-4

## Index

---

	Page		Page		Page
<b>F</b>		<b>G</b>		<b>H</b>	
Finish Damage . . . . .	7-7	Gauges		Halogen Bulb . . . . .	8-35
Flasher, Hazard Warning . . . . .	6-2	Engine oil pressure . . . . .	5-26	Hazard Warning Flasher . . . . .	6-2
Flat Tire . . . . .	6-14	Fuel . . . . .	5-25	Hazardous Driving . . . . .	4-8
Fluids		Odometer and trip meter . . . . .	5-23	Headlight Bulb Replacement . . . . .	8-35
Automatic transmission . . . . .	8-22	Speedometer . . . . .	5-23	Headlights . . . . .	5-31
Brake . . . . .	8-18	Tachometer . . . . .	5-25	High-beam indicator light . . . . .	5-30
Clutch . . . . .	8-19	Water temperature . . . . .	5-24	Hood Release . . . . .	3-8
Power steering . . . . .	8-21	Glove Box . . . . .	5-37	Horn . . . . .	3-10
Washer . . . . .	8-24			How to Minimize Environmental Paint Damage . . . . .	7-2
Fog Lights . . . . .	5-33			Damage caused by bird dropping, insects, or tree sap . . . . .	7-2
Foot Brake . . . . .	5-14			Etching caused by acid rain or industrial fallout . . . . .	7-2
Fuel Gauge . . . . .	5-25			Paint chipping . . . . .	7-3
Fuel Requirements . . . . .	4-2			Water marks . . . . .	7-3
Fuel-Filler Cap . . . . .	3-9				
Fuel-Filler Lid . . . . .	3-9				
Fuses . . . . .	6-6				
Fuse panel description . . . . .	6-9				
Replacement . . . . .	6-6				

---

	Page		Page		Page
<b>I</b>		<b>J</b>		<b>M</b>	
Ignition Key Reminder . . . . .	5-30	Jack and Lug Wrench . . . . .	6-14	Maintaining the Air Filter . . . . .	8-25
Ignition Switch Positions . . . . .	5-2	Jump-Starting . . . . .	6-4	Maintaining the Finish . . . . .	7-4
In Case of Emergency . . . . .	6-1			Maintaining Wiper Blades . . . . .	8-26
Indicator Lights		<b>K</b>		Maintenance . . . . .	8-1
Cruise set . . . . .	5-31	Keys . . . . .	3-2	Maintenance, Scheduled . . . . .	8-3
Headlight high-beam . . . . .	5-30			Manual Transmission	
O/D (overdrive) OFF . . . . .	5-31	<b>L</b>		Operation . . . . .	5-6
Inspecting		Label Information . . . . .	4-12	Recommendations for shifting . . . . .	5-7
Automatic transmission fluid level . . .	8-22	Lane-Change Signals . . . . .	5-33	Shift pattern . . . . .	5-6
Brake fluid level . . . . .	8-18	Light		Mazda Importer/Distributors . . . . .	9-5
Clutch fluid level . . . . .	8-19	Interior . . . . .	3-14	Mesh Pocket . . . . .	5-40
Coolant level . . . . .	8-15	Lighter . . . . .	5-36	Mirrors	
Engine oil level . . . . .	8-13	Lighting Control . . . . .	5-31	Outside mirrors . . . . .	3-11
Power steering fluid level . . . . .	8-21	Lights		Rearview mirror (day/night) . . . . .	3-13
Washer fluid level . . . . .	8-24	Fog . . . . .	5-33	Vanity . . . . .	5-39
Instrument Cluster . . . . .	5-22	Headlights . . . . .	5-31	Money-Saving Suggestions . . . . .	4-7
Interior Care . . . . .	7-11	On reminder . . . . .	5-30		
Interior Light . . . . .	3-14	Locking Lug Nuts . . . . .	6-20		
Interior Overview . . . . .	1-2	Lug Nuts, Locking . . . . .	6-20		
Introduction, Maintenance . . . . .	8-2	Lug Wrench . . . . .	6-14		
		Luggage Compartment . . . . .	1-5		

## Index

---

	Page		Page		Page
<b>O</b>		<b>P</b>		<b>R</b>	
Odometer and Trip Meter . . . . .	5-23	Paint Damage . . . . .	7-2	Radio . . . . .	5-53
Oil (see Engine)		Damage caused by bird dropping, insects, or tree sap . . . . .	7-2	Radio Reception . . . . .	5-49
Outside Mirrors . . . . .	3-11	Etching caused by acid rain or industrial fallout . . . . .	7-2	Rear Window Defroster . . . . .	5-35
Outside the United States and Canada . . . .	9-6	Paint chipping . . . . .	7-3	Rearview Mirror (Day/Night) . . . . .	3-13
Overheating . . . . .	6-2	Water marks . . . . .	7-3	Remote Trunk Lid Release . . . . .	3-6
Overloading . . . . .	4-11	Parking Brake . . . . .	5-15	Remote Trunk Lid Release Lock-Out . . . .	3-7
Owner Maintenance . . . . .	8-9	Power Control Mirror . . . . .	3-12	Repairing Damage to the Finish . . . . .	7-7
Precautions . . . . .	8-10	Power Door Locks . . . . .	3-4	Replacing	
Schedule . . . . .	8-9	Power Steering . . . . .	5-17	Bulb (Front, Interior) . . . . .	8-38
		Power Steering Fluid Level . . . . .	8-21	Bulb (Rear) . . . . .	8-39
		Power Windows . . . . .	3-5	Headlight bulb . . . . .	8-35
		Pregnant Women . . . . .	2-9	Tire . . . . .	8-33
		Push-Starting . . . . .	6-6	Wheel . . . . .	8-34
				Windshield wiper blades . . . . .	8-27
				Reporting Safety Defects . . . . .	9-10
				Rocking the Vehicle . . . . .	4-8

	Page
<b>S</b>	
Safety Belt (see Seat Belt)	
Safety Certification	5-51
Safety Defects, Reporting	9-10
Scheduled Maintenance	8-3
Seat Adjustment	
Recline	2-3
Slide	2-2
Seat Belt	2-7
Cleaning	7-12
Extender	2-7
Pregnant women	2-9
System	2-3
Warning light	5-28
Seat Belt Extender	2-7
Service Publications	9-11
Snow Tires	4-9
Spare Tire	6-21, 8-34
Special Driving Conditions	4-8
Specification	10-1
Specifications	
Air conditioner	10-4
Capacities	10-3
Dimensions	10-2
Electrical system	10-3
Engine	10-3

	Page
Light bulbs	10-4
Lubricant quality	10-2
Tires	10-4
Weights	10-2
Speedometer	5-23
Starting the Engine	5-4
Sunvisors	5-39
Supplemental Restraint System	2-14
Air bag activation	2-23
Air bag and children	2-15
Constant monitoring	2-26
How the air bag works	2-20
Limitations to air bag activation	2-24
Maintenance	2-28
Non-activation of air bags	2-25
Passenger-side air bag de-activation switch	2-16
System description	2-16
Warning light	5-30

	Page
<b>T</b>	
Tachometer	5-25
Temporary Spare Tire	8-34
Tire Chains	4-10
Tire Quality Grading	9-8
Tire, Flat	6-14
Tire, Spare	6-21, 8-34
Tires	8-30
Inflation pressure	8-31
Replacement	8-33
Rotation	8-32
Snow tires	4-9
Towing	6-12
Trailer Towing	4-11
Transmission Ranges, Automatic	5-9
Transmission, Automatic	5-8
Transmission, Manual	5-6
Trip meter	5-23
Trunk Lid	3-6
Key-operated trunk lid release	3-6
Remote trunk lid release	3-6
Remote trunk lid release lock-out	3-7
Turn and Lane-Change Signals	5-32
Turn Signal	5-32

## Index

---

	Page		Page
<b>U</b>		<b>W</b>	
Underbody Maintenance .....	7-7	Warning Lights/Beeps	
Uniform Tire Quality Grading System (UTQGS) .....	9-8	Antilock brake system (ABS) .....	5-29
Temperature—A, B, C .....	9-8	Brake system .....	5-27
Traction—AA, A, B, C .....	9-8	Charging system .....	5-28
Tread wear .....	9-8	Ignition key reminder .....	5-30
		Lights-on reminder .....	5-30
		Seat-belt .....	5-28
		Supplemental restraint system .....	5-30
		Warning lights inspection .....	5-27
		Warranties for Your Mazda .....	9-6
<b>V</b>		Washing .....	7-4
Vanity Mirror .....	5-39	Water Temperature Gauge .....	5-24
Vehicle Information Labels .....	4-12	Waxing .....	7-6
		Wheel Replacement .....	8-34
		Windblocker .....	5-39
		Windshield Washer .....	5-34
		Windshield Washer Fluid Level .....	8-24
		Windshield Wiper Blades	
		Replacement .....	8-27
		Windshield Wipers .....	5-34
		Winter Driving .....	4-9
		Wiper Blade, Maintaining .....	8-26
		Wiper Blades, Windshield .....	8-27